

**F&D**  
SINCE 1993

**HT-330 User Manual**  
2.1 Computer Multimedia Speaker

SHENZHEN F&D TECHNOLOGY CO., LTD. GUANGDONG, P.R.C.  
ADD: F&D Hi-Tech Park, Zhuzhou Road, Shiyao, Baoan, Shenzhen, Guangdong, P.R.C.  
Tel: +86-755-27668848/80814041 Fax: +86-755-27037777 P.C.: 518108

**1 Caution**

- Do not place the system in the high-temp and humid environment, prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents, do not open the back panel cover for repair without professional guidance.
- In case fragments or other liquids are accidentally sprinkled inside the cabinet, please switch off the power immediately.
- In case of repair, please come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work.
- Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.
- The equipment shall be used at maximum 35 degree C ambient temperature.
- The operation altitude up to 2000m.

**Product wiring diagram**

**Packaging content**

- Speaker 1unit
- 3.5mm to RCA cable 1pc
- Remote control 1pc
- Operation manual 1pc
- Power cable 1pc
- Bolt and Rubber stopper 1set

**1. USB play**  
**2. HDMI(ARC)**  
**3. Optical**  
**4. AUX IN**  
**5. Subwoofer out**  
**6. Power IN**

**3 Panel key controls**

**Control panel instruction**

**A. [Power]** : Turn on/off the unit.  
**B. [Source]** : Switch among Bluetooth/OPTICAL/USB/AUX /HDMI(ARC) mode.  
**C. [Volume]** :  
a. USB Mode: Short press to play/pause the music playback.  
b. Bluetooth mode: Short press to play/pause music, long press for BT Search mode.  
**D. [Play/Pause]** : Short press to decrease volume level  
a. USB mode: Long press to select previous song.  
b. Bluetooth mode: Long press to select previous song.  
**E. [Next]** : Short press to increase volume  
a. USB mode: Long press to select next song.  
b. Bluetooth mode: Long press to select next song.

**4 Remote control**

Remote control keys function

- [Standby]: Short press to power on/off the unit.
- [Mute]: Short press to mute or unmute.
- [Volume increase]: Press to increase volume level.
- [Previous song]: Under USB and Bluetooth mode, short press to select previous song.
- [Next song]: Under USB and Bluetooth mode, short press to select next song.
- [Play/Pause]: Under USB and Bluetooth mode, short press to Play/Pause music.
- [Volume decrease]: Press to decrease volume level.
- [Trebble mode]: Short press "Trebble" first, then press volume increase or volume decrease to adjust "Trebble" volume level.
- [BASS mode]: Short press "BASS" first, then press volume increase or volume decrease to adjust "BASS" volume level.
- [Source]: Switch among Bluetooth/OPTICAL/USB/AUX /HDMI(ARC) mode.
- [Bluetooth mode]: Short press to select Bluetooth mode, long press 2s into Bluetooth pairing mode.
- [Movie]: Short press 2s to on/off the Movie mode.
- [Reset]: Short press to reset the current mode & long press for factory default settings.

**5 Remote control**

**6 Wall Bracket Installation Instructions**

- Mark two bolt locations on the wall with 600mm interval at a level.
- Drill two holes on the marked locations.
- Insert two bolts into the rubber stopper, and leave 2mm outside for hanging the bracket.

**7 Operation guidance**

**Playback via Bluetooth**

**Basic Requirement**

- Bluetooth must be activated on the mobile end device which you want to connect with F&D HT-330
- The mobile end device must support Bluetooth A2DP
- The mobile end device must be within range of the F&D HT-330(max.15m)

**Steps need to be followed**

- Press Source key to select Bluetooth mode
- [S] will appear on the display
- You now have 30 seconds to register your mobile end device
- Start the search on your mobile end device
- If the mobile device requires an access code, please enter 0000
- Once confirmed, the connection will be done automatically and [S] will appear in the display

**Please note:**

- the device most recently connected to the F&D System connects automatically when Bluetooth is activated and the input for Bluetooth playback has been selected, in this case the message [S] will appear.
- Start the playback of a medium on your mobile end device and the sound will automatically be generated by the F&D System.

**USB mode**

- Plug in USB driver
- Card reader supporting max 32GB as well as MP3/WMA dual formats decoding
- Play music (refer to remote control function)

**HDMI(ARC) mode**

- Short press Source to select Optical mode
- Connect TV with HDMI(ARC) port through HDMI signal cable on the rear of the speaker.
- Please make sure to set "HDMI(ARC) mode" as digital output on your devices.
- Adjust volume while playing music.

**Optical mode**

- Short press Source to select Optical mode
- Connect TV with optical port, on the rear of the speaker through optical cable.
- Please make sure to set "PCM mode" as digital output on your devices, such as Blue-ray DVD, TV and Video player, etc. Below as example.
- Adjust volume while playing music.

**Tips:** Please make sure that TV supports HDMI(ARC) and optical function.

**9 Specifications**

Output power (RMS): 80W(40W+20W\*2)  
Speaker Unit: Full-range speaker: 50x90mm  
Subwoofer: 6.5"  
Frequency response: 20Hz-20KHz  
S/N Ratio: >70dB  
Separation: >45dB  
Power: 100-240V-50/60Hz 0.5A  
Soundbar: W898xD101xH68mm  
Subwoofer: W190xD345xH331mm

**10 Safety Instruction for CB and CE-LVD**

- Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- Correct Disposal of this product.** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
- Frequency: 2.402GHz-2.48GHz
  - The Max. transmit power: 10 dBm

**Troubleshooting**

Problem	Possible Cause	Solution
F&D system does not turn on	Power cable not connected to the power outlet and/or F&D System	Check connection
Sound reproduction too soft	Volume of F&D System set too low	Increase the volume using the "Volume" button, increase the volume of the source device
F&D System does not respond to remote control	The battery is empty	Replace battery, observe correct polarity at insertion
No sound reproduction	Source device not producing any signal.	Digital output on the source device not activated (please refer to device instructions).
	Cable not correctly connected/faulty cable.	Check the connection of the source device to the F&D System and change the cable if necessary.
No sound output under optical mode	distance is far from device in Bluetooth mode	put your Bluetooth device close to the speaker
	Bluetooth device not connected successfully	please restart the speaker and try again
No sound output under optical mode	optical cable not connect well or damaged	not bend optical cable over 90 degree

**F&D WARRANTY CARD**

**END-USER'S COPY**  
**WARRANTY REGISTRATION CERTIFICATE**

Mr./Mrs/Ms First Name: \_\_\_\_\_  
Last Name: \_\_\_\_\_  
Address: \_\_\_\_\_  
Contact No.: \_\_\_\_\_  
Product Name: \_\_\_\_\_  
Model No.: \_\_\_\_\_  
Serial No.: \_\_\_\_\_  
Date Purchased: \_\_\_\_\_  
Invoice No.: \_\_\_\_\_  
Retail Outlet Where Purchased: \_\_\_\_\_

(Please print the name & address)

**SECTION 1**

**WARRANTY TERMS & CONDITIONS**

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorized Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorized Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorized Dealer. (Parts would be replaced when necessary)
  - Parts: ..... 1 year
  - Technical service free: ..... 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
  - Failure to present the warranty card and receipt when servicing is required.
  - Full particulars not clearly shown or alterations made against the actual information.  
For e.g.: Alteration of the date of purchase, serial numbers altered or removed.
  - This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
  - The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen F&D Technology Co., Ltd.  
ADD: F&D Hi-Tech Park, Zhuzhou Road, Shiyao, Baoan, Shenzhen, China  
P.C.: 518108 http://www.fand.com

**F&D WARRANTY CARD**

**DISTRIBUTOR'S COPY**  
**WARRANTY REGISTRATION CERTIFICATE**

Mr./Mrs/Ms First Name: \_\_\_\_\_  
Last Name: \_\_\_\_\_  
Address: \_\_\_\_\_  
Contact No.: \_\_\_\_\_  
Product Name: \_\_\_\_\_  
Model No.: \_\_\_\_\_  
Serial No.: \_\_\_\_\_  
Date Purchased: \_\_\_\_\_  
Invoice No.: \_\_\_\_\_  
Retail Outlet Where Purchased: \_\_\_\_\_

(Please print the name & address)

**SECTION 2**

**WARRANTY TERMS & CONDITIONS**

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorized Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorized Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorized Dealer. (Parts would be replaced when necessary)
  - Parts: ..... 1 year
  - Technical service free: ..... 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
  - Failure to present the warranty card and receipt when servicing is required.
  - Full particulars not clearly shown or alterations made against the actual information.  
For e.g.: Alteration of the date of purchase, serial numbers altered or removed.
  - This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
  - The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen F&D Technology Co., Ltd.  
ADD: F&D Hi-Tech Park, Zhuzhou Road, Shiyao, Baoan, Shenzhen, China  
P.C.: 518108 http://www.fand.com